


SOFA BED CARE INSTRUCTIONS (clic clac)

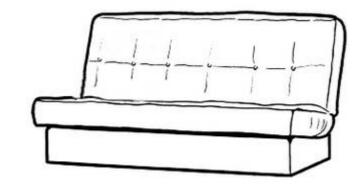

Outlined below are General Care Instructions that will help prolong the look and life of your sofa bed by preventing wear and damage.

REGULAR CLEANING WITH A SOFT BRUSH OR VACUUM

Dirt and dust will rapidly increase fabric wear, they can also cause both dulling and fading of colours. A programme of regular cleaning is advised

- Remove dust by pre-brushing with a soft brush
- Gently Vacuum all areas

SUNLIGHT AND HEAT

- Direct sunlight or heat can cause fabrics to deteriorate or fade. Protect them by placing your furniture out of the way of prolonged direct sunlight or by drawing curtains and blinds when applicable.
- Avoid placing furniture too close to fires or radiators.
- Reduce exposure by moving items around or changing position so that the same piece or area is not always exposed.

PREVENT ABUSE AND EXCESSIVE FORCE

- To maintain the appearance of your sofa bed, restrain children from climbing or jumping on it, especially in shoes.
- Do not allow domestic pets to climb on the furniture or chew or claw it. Oils and greases from animals will cause deterioration in the appearance of the fabric.

• Do not misuse your sofa bed by applying excessive weight by sitting on edges of cushions as this will cause permanent wear or distortion.

BEWARE OF SHARP OR HOT OBJECTS

- Sharp objects such as buckles, toys and jewellery can easily snag on the fabric and produce tears and pulls in the fabric.
- Hot objects such as the heat from cups and mugs can permanently disfigure upholstery.

OPENING & CLOSING OF YOUR SOFA BED

• Ensure the instructions for the opening and closing of your sofa bed are followed in order to maintain the life of your sofa bed.

PLACEMENT OF YOUR SOFA BED

- Allow enough space behind the sofa bed so that when it is reclined it does not cause any damage to walls.
- Make sure the base of the sofa bed remains in contact with the ground.

SOFA BED USE

• The Sofa Bed is designed for everyday use as a sofa and occasional use as a bed.

CLEANING

THIS PRODUCT REQUIRES SPECIALIST UPHOLSTERY CLEANING ONLY

Efforts to prevent spillages and stains will help retain the appearance of your upholstery as all stain removal will result in some colour loss.

REMOVAL OF SPILLAGES AND STAINS

Due to the variety of fabrics used these instructions are for general guidance only. Professional cleaning advice should always be sought.

WHAT NOT TO DO

• Do not soak or allow fabric to become wet.

- Never rub or scrub with a wet cloth to remove spills or stains as they will damage fabric (and its flame retardancy) and remove colour.
- Do not use washing up liquid, detergents or bleach to remove stains.


BEFORE YOU START

Warnings


Important: Retain these instructions for future reference.

- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Keep hands away from folding mechanisms to prevent possible entrapment or injury.
- Please pay particular attention when children or animals are present to ensure that no accidental entrapment occurs whilst operating this product.
- Do not use this product if parts are missing, damaged or worn.
- Do now allow children to jump on the bed as this could cause damage to the frame.


Looking at the right hand side.

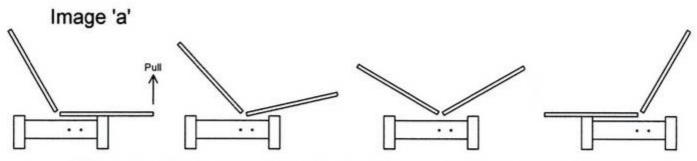

When the futon appears to be in the seat position as seen in image 'a', hold the front of the lower slatted panel and lift to rotate the two panels to face the opposite direction.

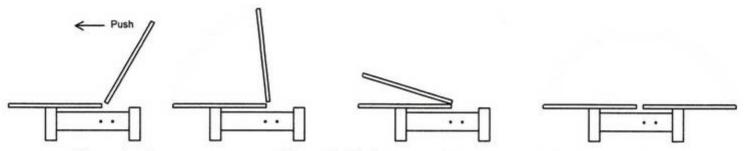

Now in the reverse position, fold the panels to a sandwich position. Now lift the upper most section and flatten the unit out into a horizontal position.

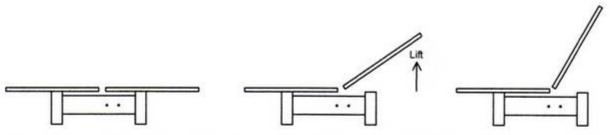

To change the futon into its sofa state, simply lift the front as seen above until it clicks twice and it is in the required position.

